


How to connect TXT via Bluetooth in Windows 10


The procedure is exactly the same as in Win 7, which is described in the manual. Only the pictures differ a little bit:

1. Bluetooth has to be activated on the TXT Controller as well as on the PC.


1. go into the Windows 10 **Settings**

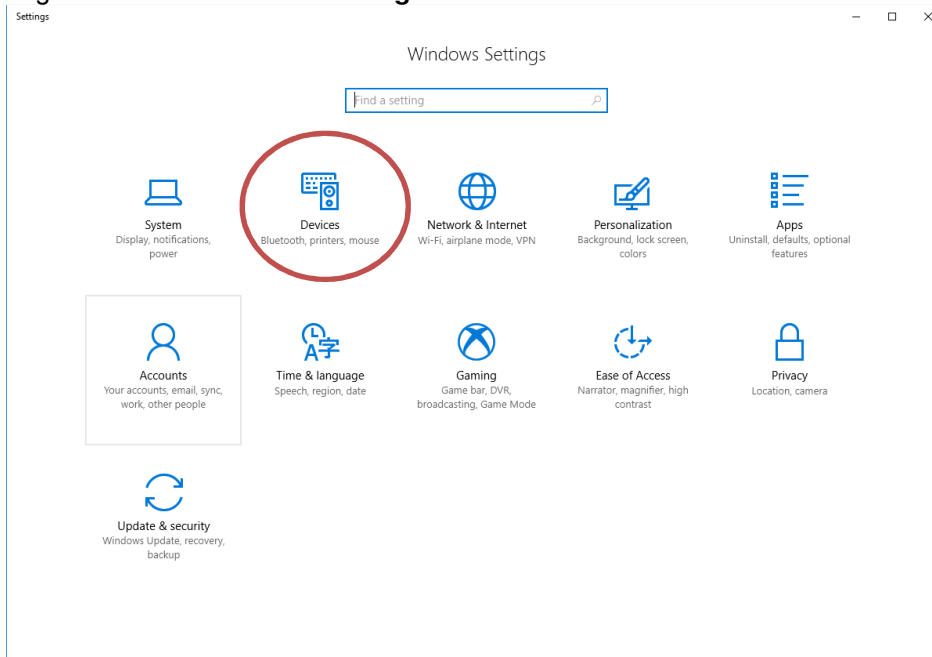


2. Click on Devices

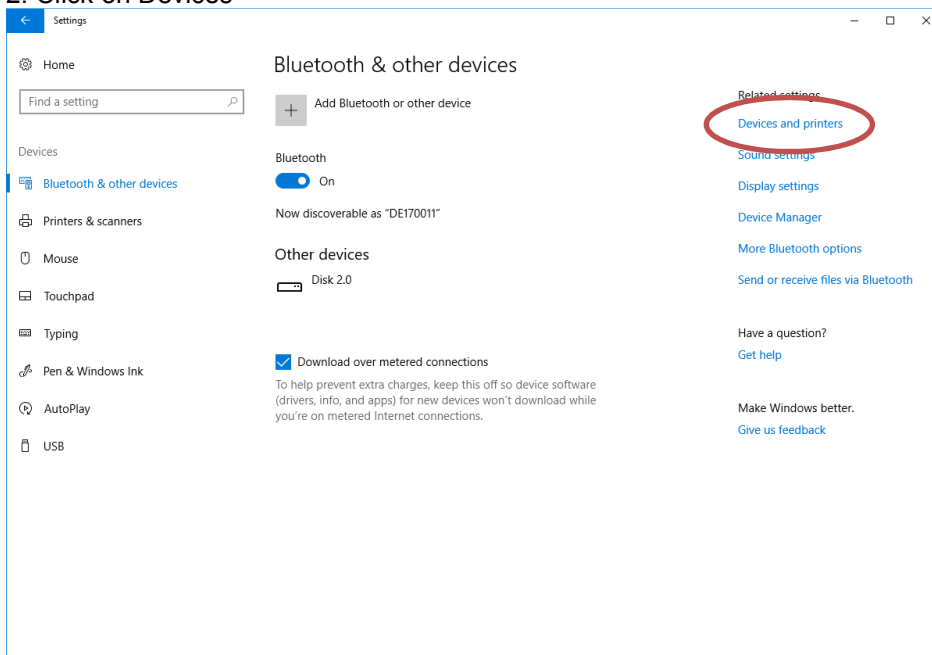


3. Click on Devices and printers

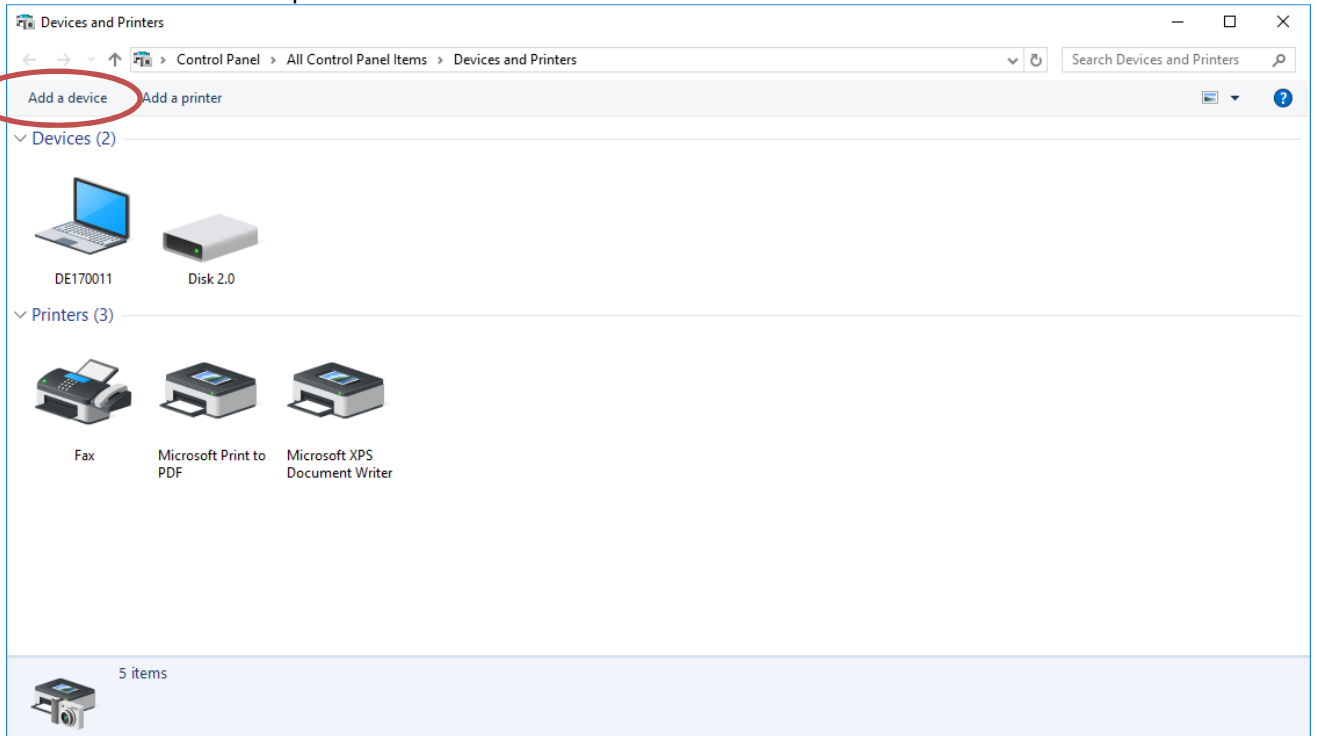

4. Click on "Add a device"

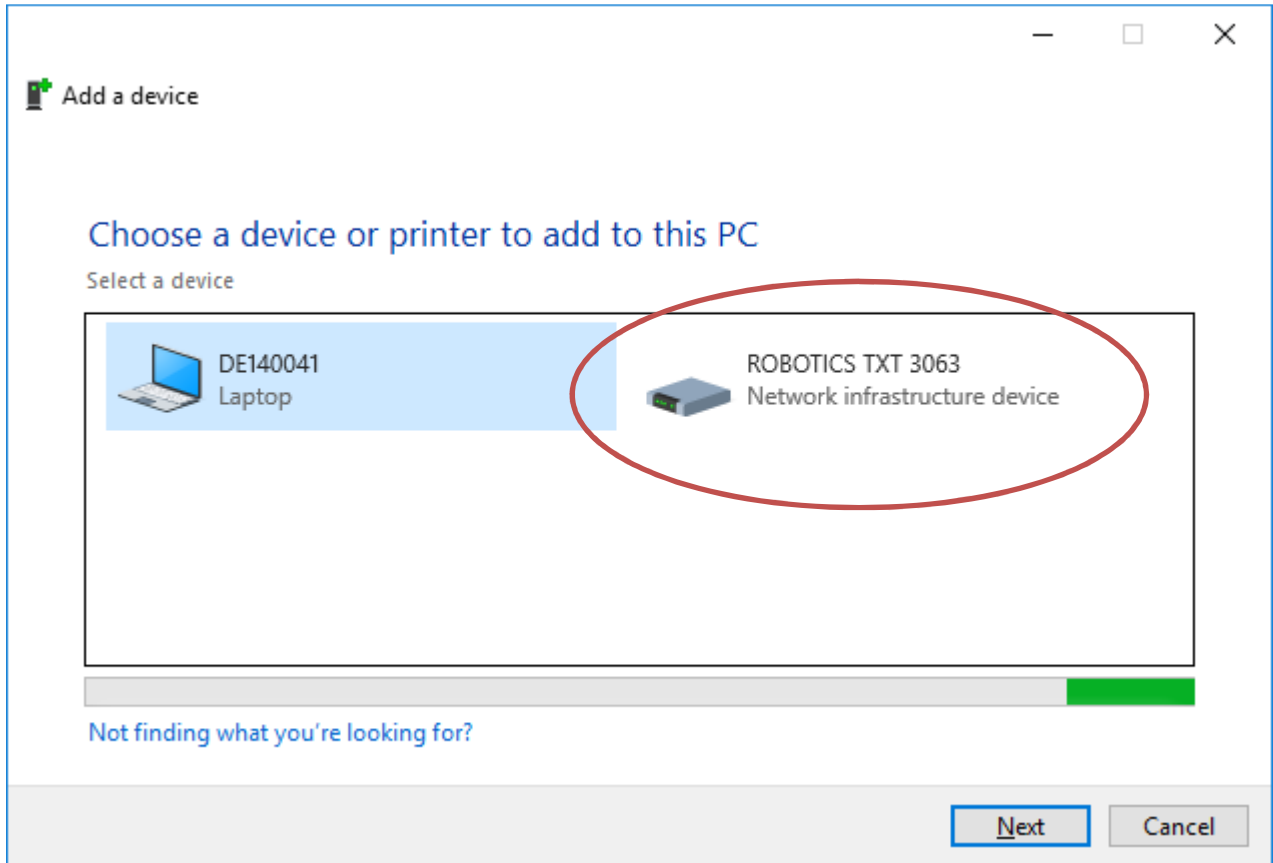


5. Select the TXT which is displayed.

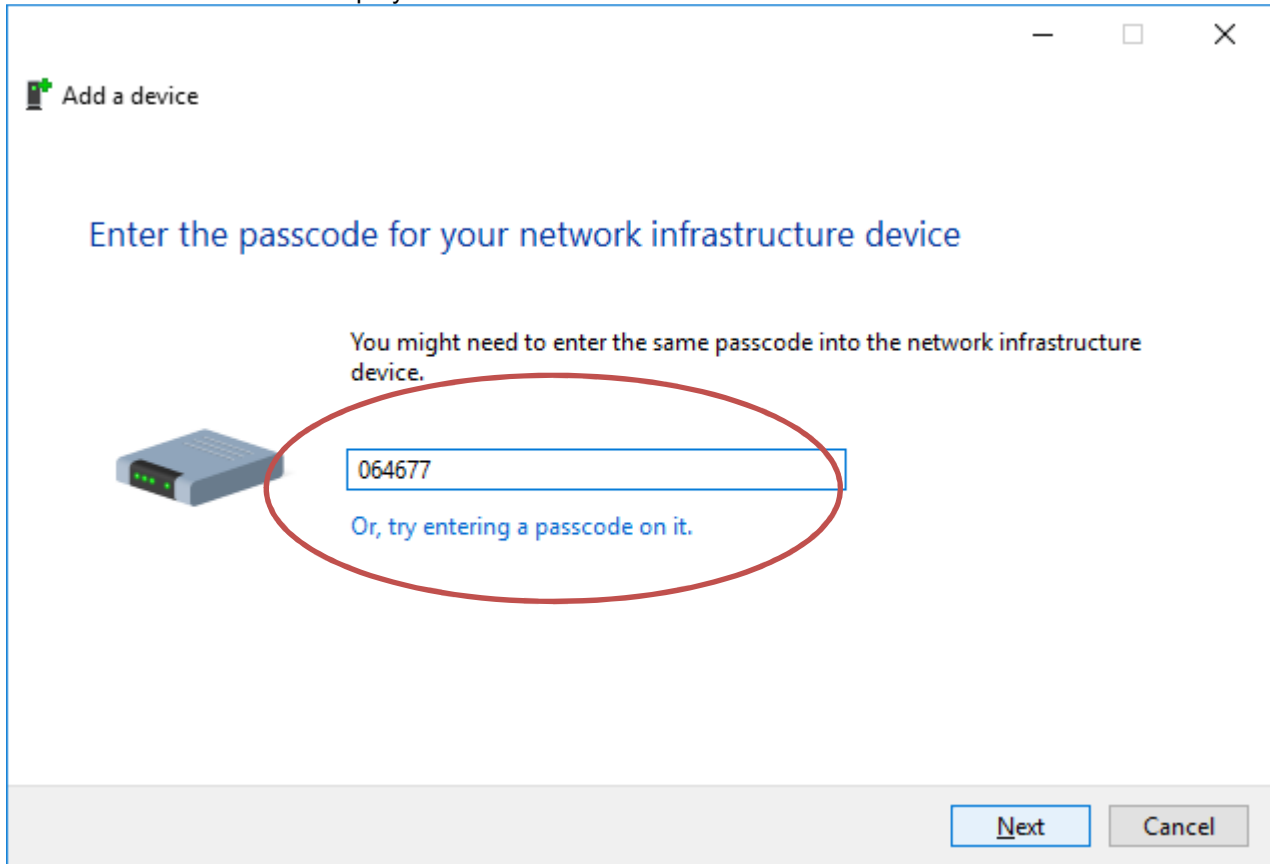

6. Enter the passcode which is displayed on the TXT Display (Settings – Network – Bluetooth Pairing Code)

7. After the successful installation, go back to Devices and Printers. The TXT is added there.

8. select the TXT and choose **Connect using – Access point**.

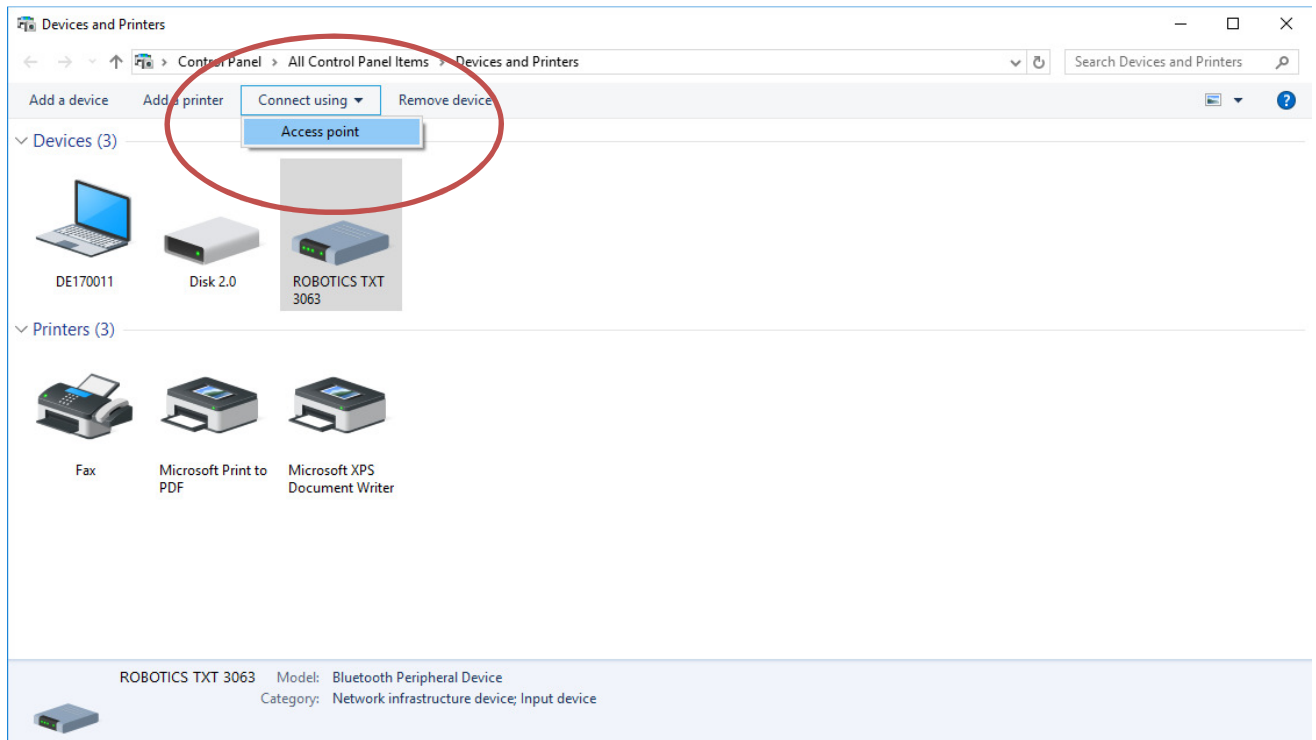

Go to ROBOPro and connect the TXT to ROBOPro

